

 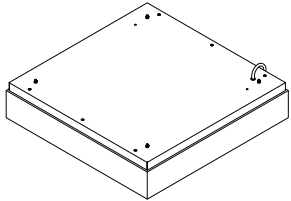
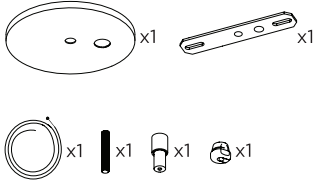
 


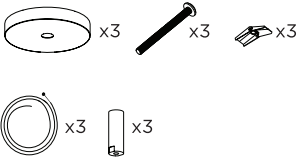

3G-PKU2401
24" PENDANT KUBO




THE IMAGES SHOWN ARE FOR ILLUSTRATION PURPOSES ONLY AND MAY NOT BE AN EXACT REPRESENTATION OF THE PRODUCT

INCLUDED COMPONENTS		
 KUBO	POWER FEED KIT	NON-POWER FEED KIT
	  FOR GRID CEILING APPLICATION 	  FOR GRID CEILING APPLICATION 


INSTRUCTION KEY	INFORMATION
 ADDITIONAL	INSTALLATION SHOULD ONLY BE PERFORMED BY A CERTIFIED ELECTRICIAN REFER TO LOCAL/NATIONAL CODES FOR PROPER INSTALLATION FAILURE TO FOLLOW INSTALLATION INSTRUCTION MAY VOID THE WARRANTY DO NOT TOUCH LEDS. LEDS MUST BE PROTECTED FROM MECHANICAL STRESS OR DEBRIS TURN OFF POWER DURING INSTALLATION OR SERVICING
 ATTENTION	
 POWER ON	
 POWER OFF	

SUSPENSION MOUNTING

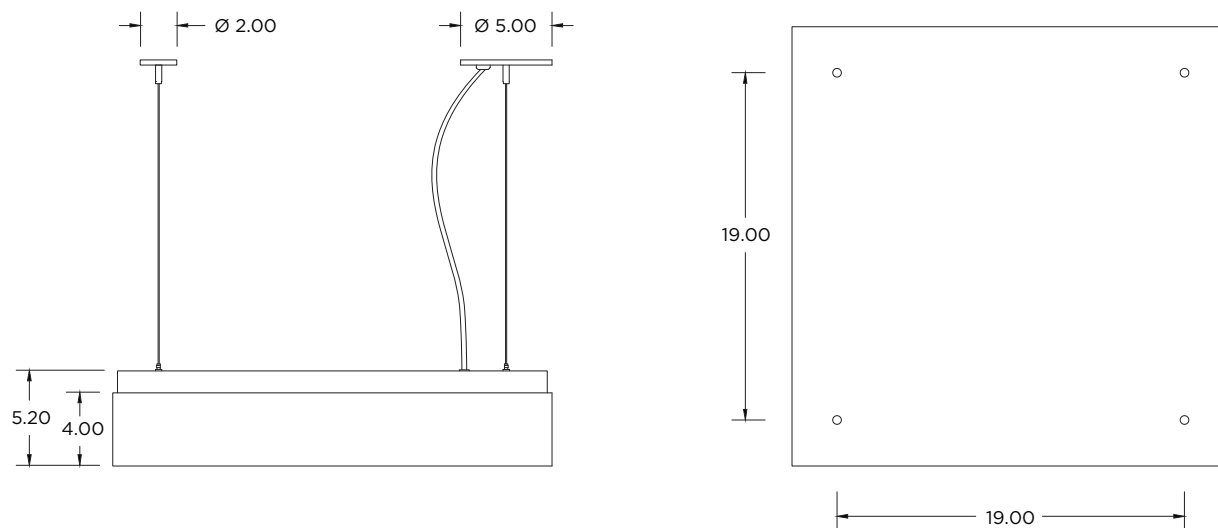

DRYWALL SUSPENSION


1

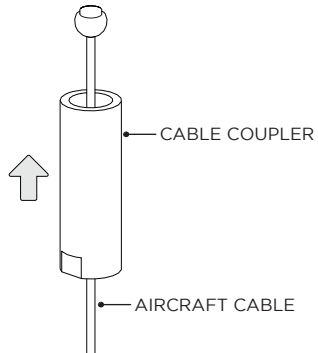


FEED AIRCRAFT CABLES THROUGH CABLE COUPLERS

2

POWER FEED SUSPENSION

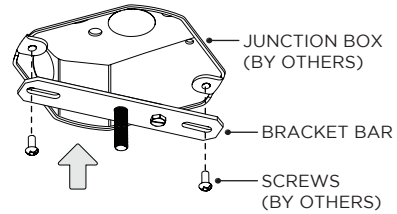

3

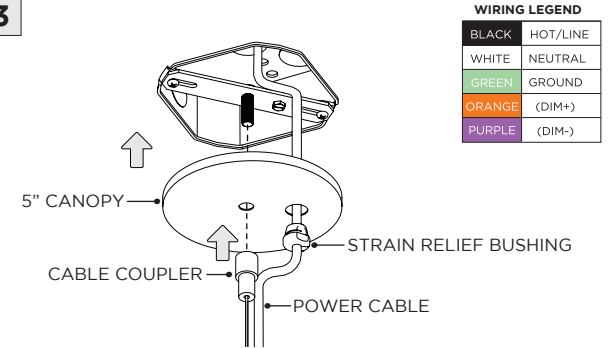


WIRING LEGEND

BLACK	HOT/LINE
WHITE	NEUTRAL
GREEN	GROUND
ORANGE	(DIM+)
PURPLE	(DIM-)


MAKE ELECTRICAL CONNECTIONS INSIDE JUNCTION BOX
SECURE 5" CANOPY TO CEILING

4


NON-POWER FEED SUSPENSION

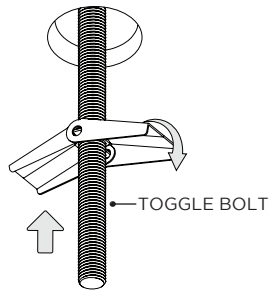


5

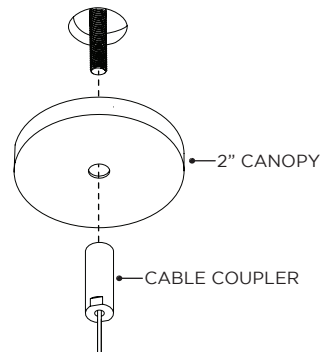

6

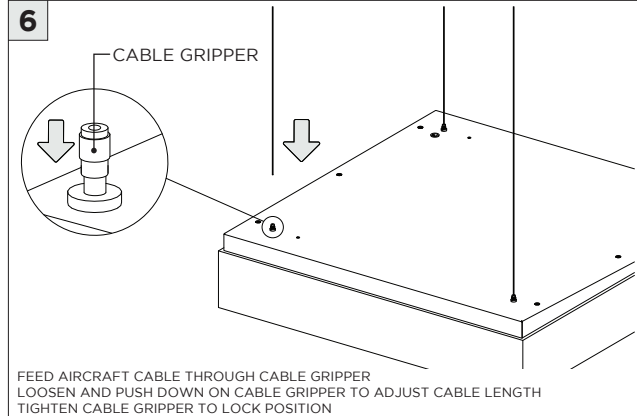


6A

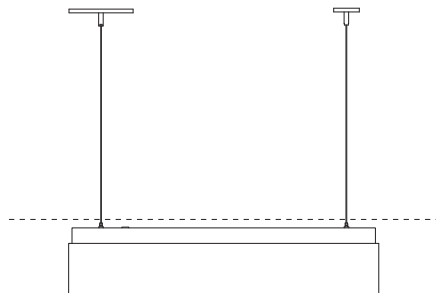

ENSURE FIXTURE IS LEVEL

GRID CEILING SUSPENSION

1

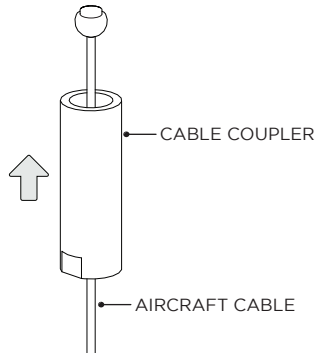


FEED AIRCRAFT CABLES THROUGH CABLE COUPLERS


2

POWER FEED SUSPENSION

IF NO JUNCTION BOX IS REQUIRED
REFER TO NON-POWER FEED SUSPENSION
STEPS FOR CANOPY MOUNTING

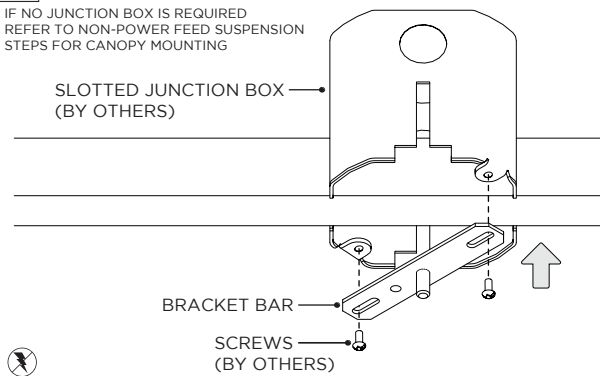


3

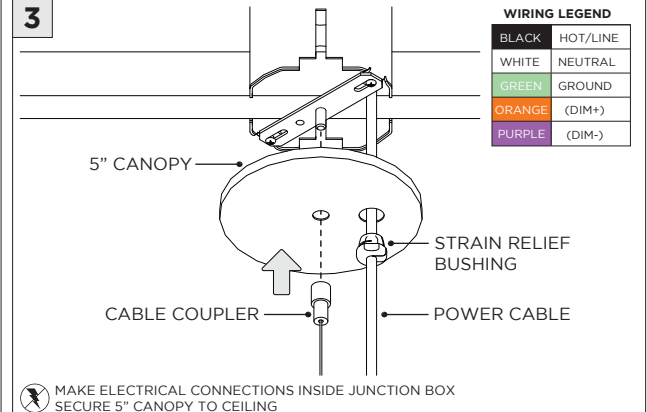


4

NON-POWER FEED SUSPENSION

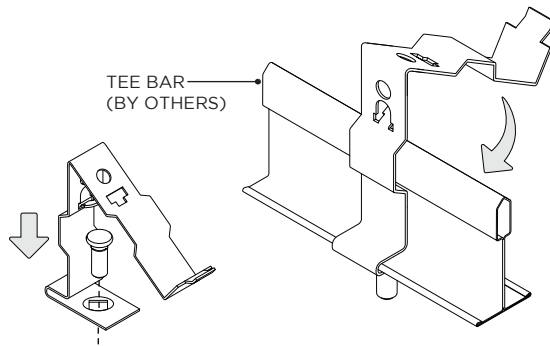


5

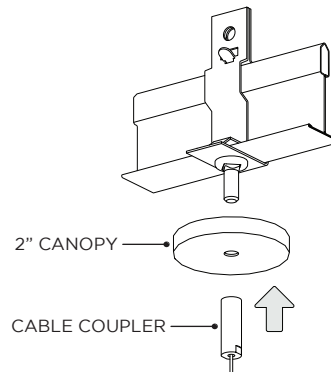


2" CANOPY USED FOR NON-POWER FEED SUSPENSION
5" CANOPY USED FOR POWER FEED SUSPENSION

6

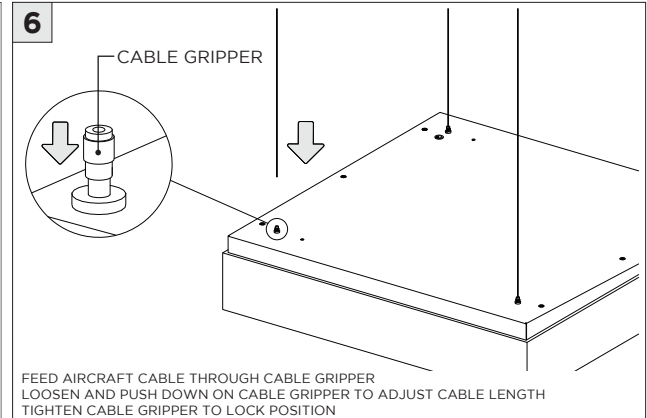


6A

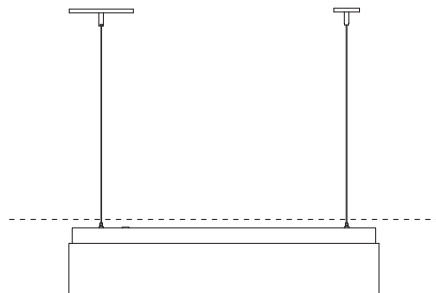


ENSURE FIXTURE IS LEVEL

DRIVER SERVICING

1

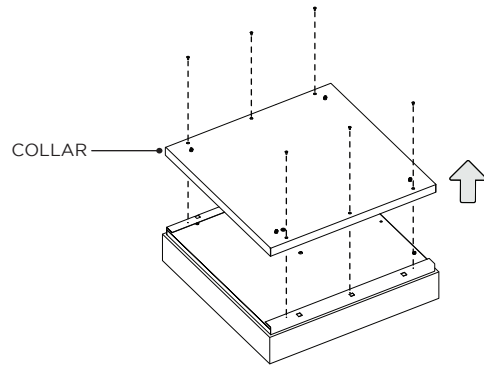


2

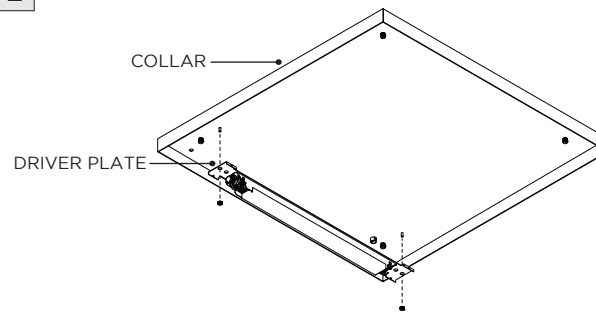


REMOVE DRIVER PLATE
LOCATED UNDER COLLAR

3

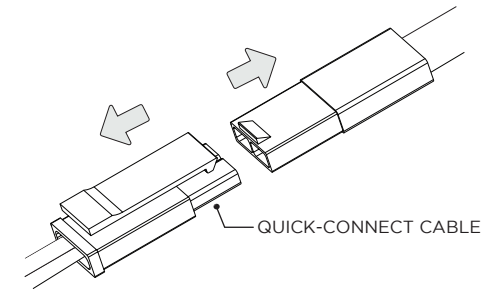

DISCONNECT QUICK-CONNECT CABLE FROM LED BOARDS


4

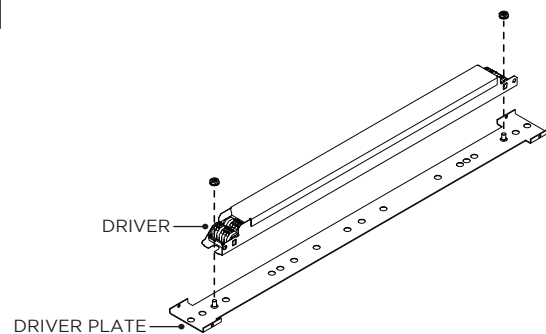


SERVICE DRIVER AND REASSEMBLE FIXTURE

LED SERVICING

1

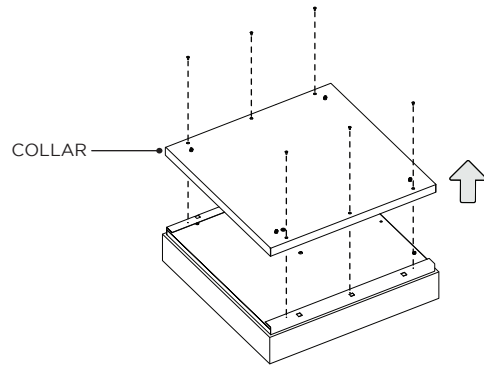


2

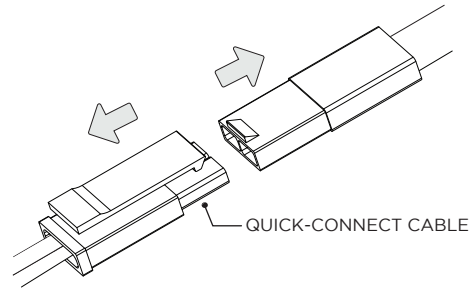


DISCONNECT QUICK-CONNECT CABLE FROM LED BOARDS

3

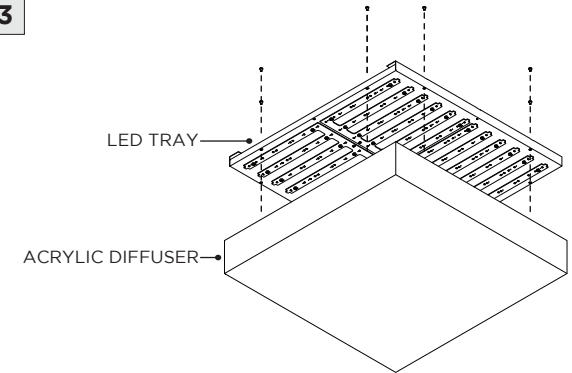


REMOVE ACRYLIC DIFFUSER FROM LED TRAY

3A

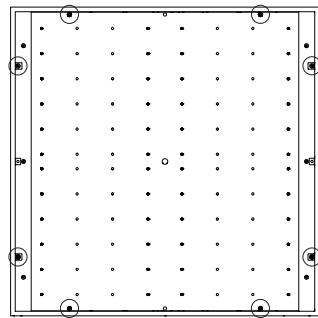

REMOVE 8 SCREWS TO SEPARATE ACRYLIC DIFFUSER

4

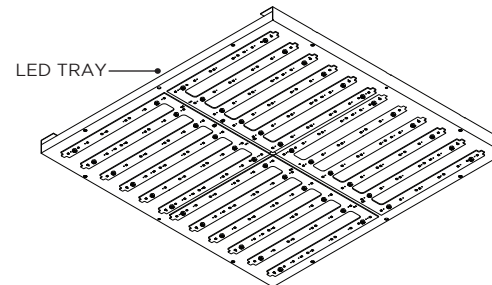

REPLACE LED TRAY AND REASSEMBLE FIXTURE