



3.8" RECESSED MADISON SLOT

GRID CEILING

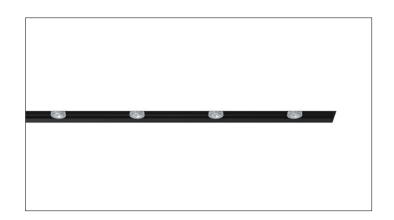


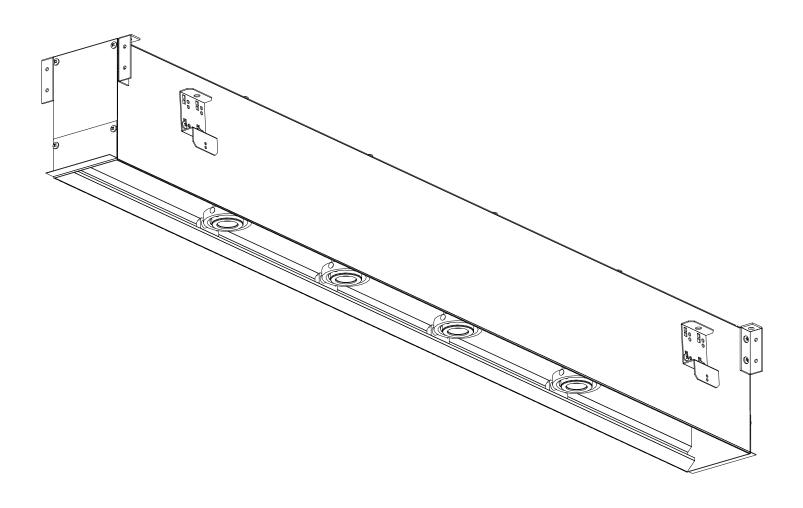

\bigwedge for **New Construction** installation only


INSTRUCTION KEY	INFORMATION
ADDITIONAL	INSTALLATION SHOULD ONLY BE PERFORMED BY A CERTIFIED ELECTRICIAN
(i) ATTENTION	REFER TO LOCAL/NATIONAL CODES FOR PROPER INSTALLATION
ATTENTION	FAILURE TO FOLLOW INSTALLATION INSTRUCTION MAY VOID THE WARRANTY
POWER ON	DO NOT TOUCH LEDS. LEDS MUST BE PROTECTED FROM MECHANICAL STRESS OR DEBRIS
N POWER OFF	TURN OFF POWER DURING INSTALLATION OR SERVICING

1 FIXTURE MOUNTING

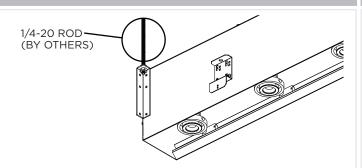


-LUMINAIRE MUST BE INSTALLED PRIOR TO INSTALLING CEILING -ATTACH FIXTURE TO CEILING WITH 1/4-20 RODS OR SUSPENSION CABLES (BY OTHERS)

2 CONNECT SECTIONS

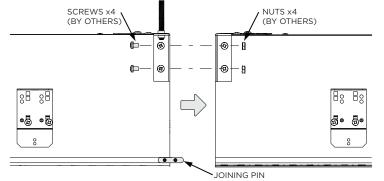


- -ALIGN SECTIONS WITH JOINING PINS
- -SECURE SECTIONS TOGETHER BY FASTENING THE MOUNTING BRACKETS WITH 8-32 SCREWS AND NUTS (BY OTHERS)

3 ELECTRICAL CONNECTIONS

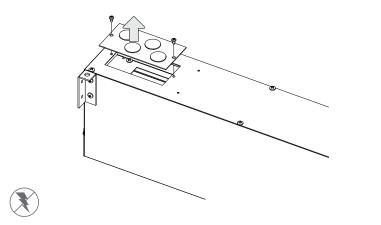


-REMOVE ACCESS PANEL AND MAKE ALL ELECTRICAL CONNECTIONS INSIDE ELECTRICAL COMPARTMENT

4 POWERING & ARRANGING SECTIONS

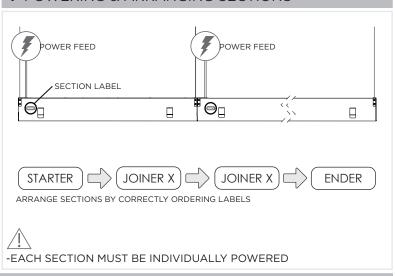


5 SECURE TO CEILING

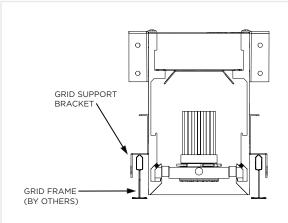



-SECURE FIXTURE TO CEILING BY RESTING GRID SUPPORT BRACKETS ON GRID FRAME


UNIVERSAL MOUNTING BRACKET USED FOR ALL GRID CEILING TYPES

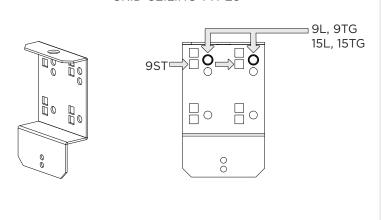


6 SPACER REMOVAL

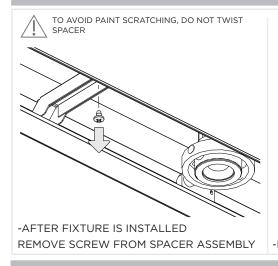

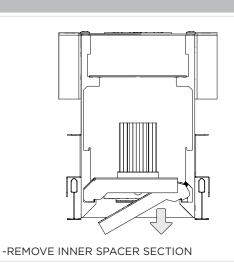


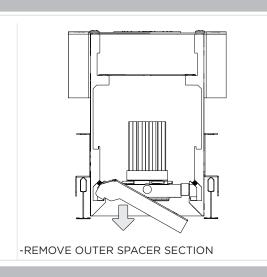


7 LED SERVICING

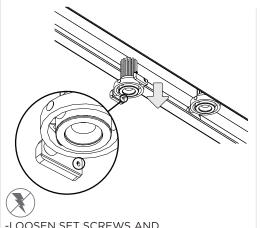



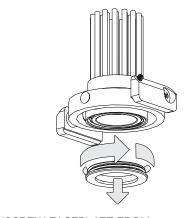



-UNSCREW FACEPLATE FROM

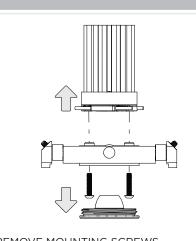

-REMOVE MOUNTING SCREWS, REPLACE LED AND REASSEMBLE GIMBAL

8 DRIVER SERVICING

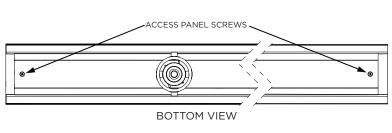





- -REMOVE GIMBAL
- -REMOVE ACCESS PANEL FROM HOUSING

- -DRIVER IS LOCATED UNDER ACCESS PANEL
- -ONCE DRIVER IS REPLACED, REATTACH ACCESS PANEL & GIMBAL TO HOUSING