



## 3.8" RECESSED MADISON SLOT

TRIM

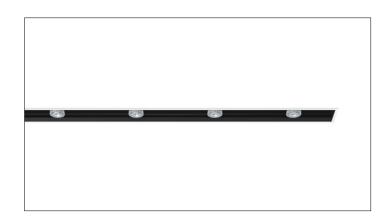

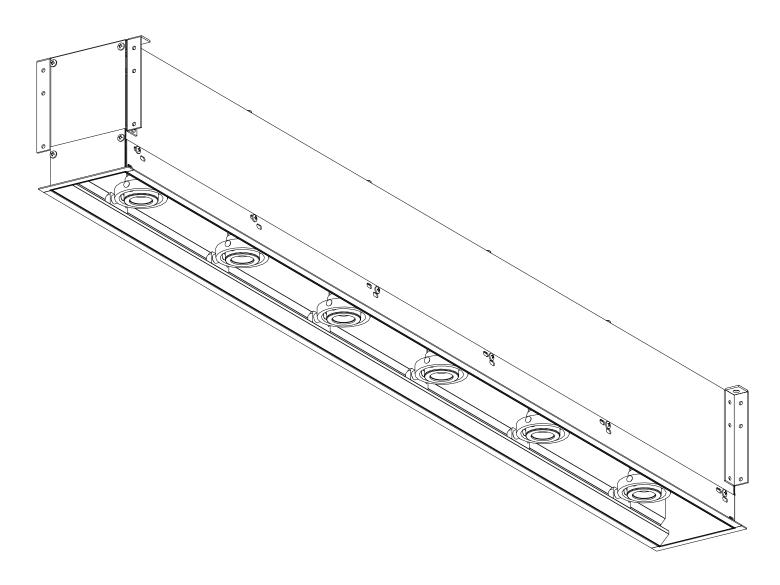


### ⚠ FOR **NEW CONSTRUCTION** INSTALLATION ONLY

INSTRUCTION KEY	INFORMATION
⚠ ADDITIONAL	INSTALLATION SHOULD ONLY BE PERFORMED BY A CERTIFIED ELECTRICIAN
(i) ATTENTION	REFER TO LOCAL/NATIONAL CODES FOR PROPER INSTALLATION
ATTENTION	FAILURE TO FOLLOW INSTALLATION INSTRUCTION MAY VOID THE WARRANTY
POWER ON	DO NOT TOUCH LEDS. LEDS MUST BE PROTECTED FROM MECHANICAL STRESS OR DEBRIS
POWER OFF	TURN OFF POWER DURING INSTALLATION OR SERVICING


#### INSTALLATION INSTRUCTIONS

#### 1 FIXTURE MOUNTING

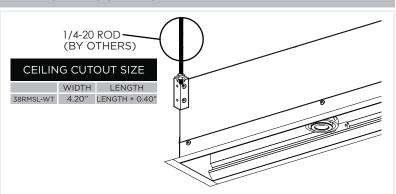


-LUMINAIRE MUST BE INSTALLED PRIOR TO INSTALLING CEILING
-ATTACH FIXTURE TO CEILING WITH 1/4-20 RODS OR SUSPENSION CABLES (BY OTHERS)

#### 2 CONNECT SECTIONS

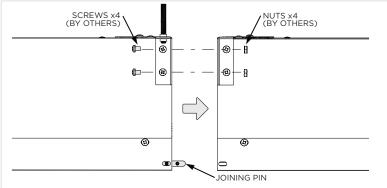


- -ALIGN SECTIONS WITH JOINING PINS
- -SECURE SECTIONS TOGETHER BY FASTENING THE MOUNTING BRACKETS WITH 8-32 SCREWS AND NUTS (BY OTHERS)

#### **3** ELECTRICAL CONNECTIONS

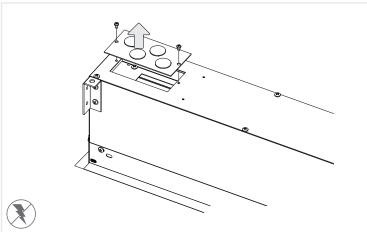

-REMOVE ACCESS PANEL AND MAKE ALL ELECTRICAL CONNECTIONS INSIDE ELECTRICAL COMPARTMENT


#### 4 POWERING & ARRANGING SECTIONS

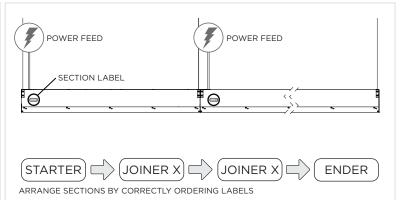





-EACH SECTION MUST BE INDIVIDUALLY POWERED

#### 5 SPACER REMOVAL

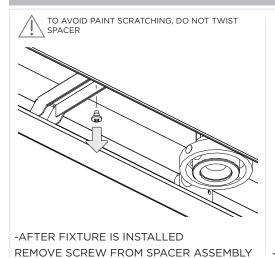

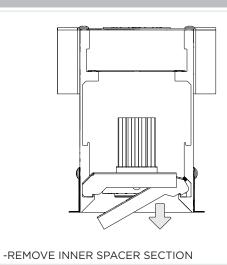

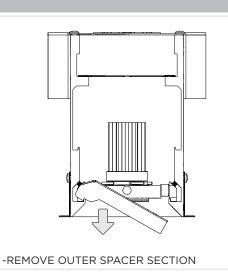

REMOVE GIMBAL ASSEMBLY FROM HOUSING GIMBAL ASSEMBLY

#### **INSTALLATION INSTRUCTIONS**

-REMOVE MOUNTING SCREWS,

REPLACE LED AND REASSEMBLE GIMBAL

# 6 LED SERVICING -LOOSEN SET SCREWS

-UNSCREW FACEPLATE FROM

#### 7 DRIVER SERVICING

