



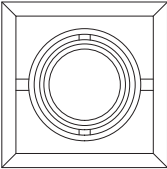








3G-PM1
1 LIGHT MADISON PENDANT




i THE IMAGES SHOWN ARE FOR ILLUSTRATION PURPOSES ONLY AND MAY NOT BE AN EXACT REPRESENTATION OF THE PRODUCT

HOUSING	INCLUDED COMPONENTS
3G-PM1 	CEILING CANOPY KIT 

INSTRUCTION KEY	INFORMATION
 ADDITIONAL	INSTALLATION SHOULD ONLY BE PERFORMED BY A CERTIFIED ELECTRICIAN
 ATTENTION	REFER TO LOCAL/NATIONAL CODES FOR PROPER INSTALLATION
 POWER ON	FAILURE TO FOLLOW INSTALLATION INSTRUCTION MAY VOID THE WARRANTY
 POWER OFF	DO NOT TOUCH LEDS. LEDS MUST BE PROTECTED FROM MECHANICAL STRESS OR DEBRIS
	TURN OFF POWER DURING INSTALLATION OR SERVICING

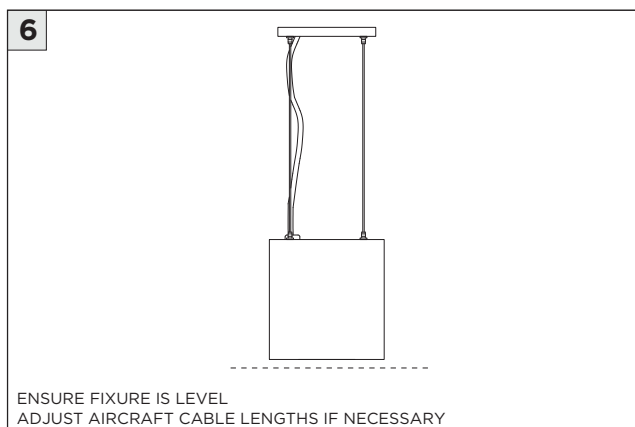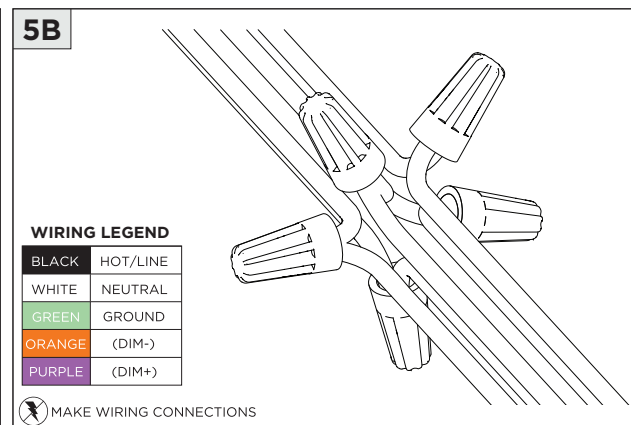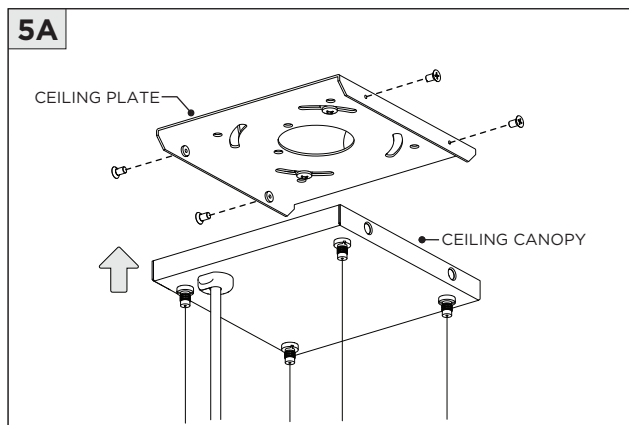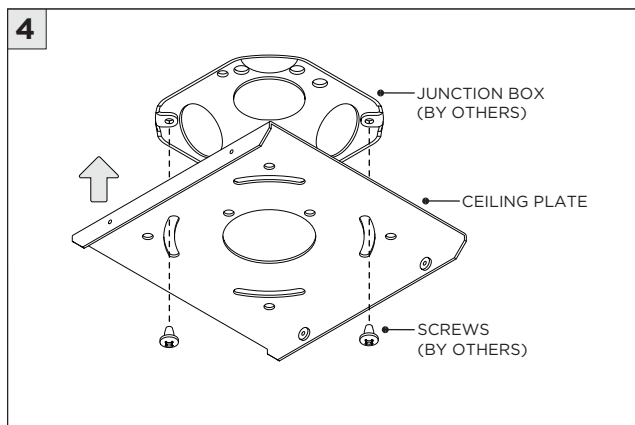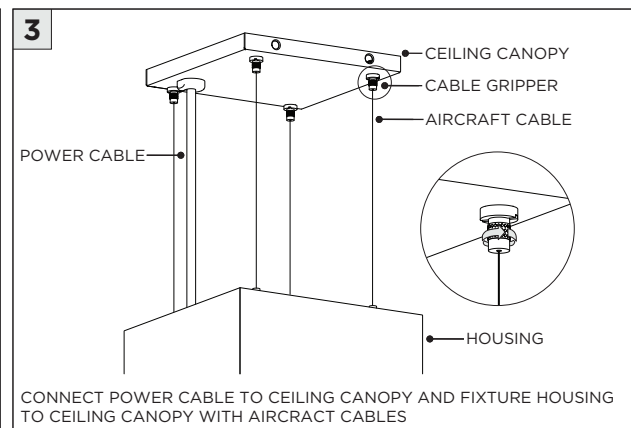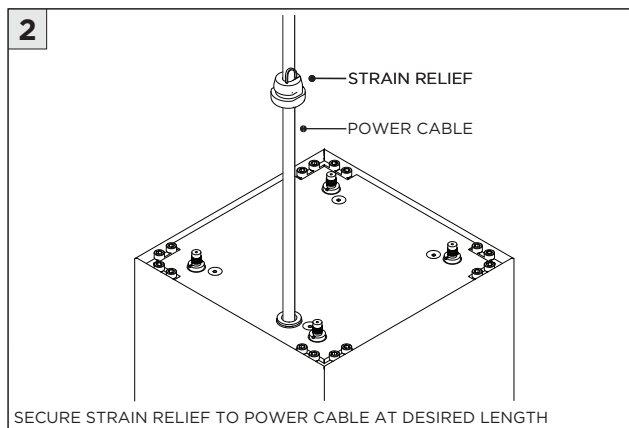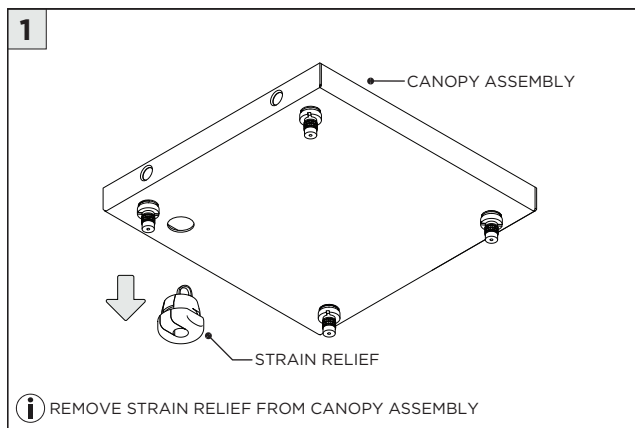


DRIVER SERVICING

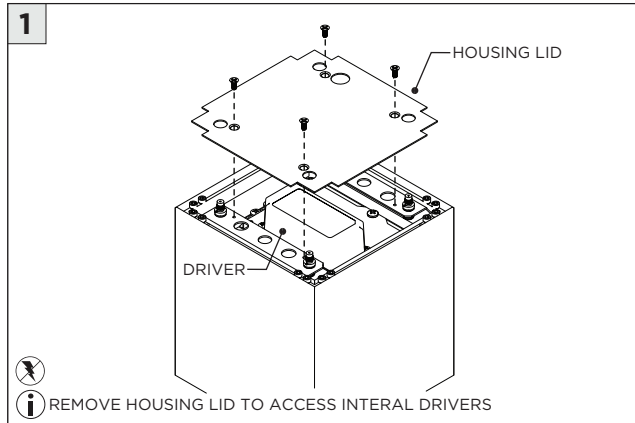


LED SERVICING

1

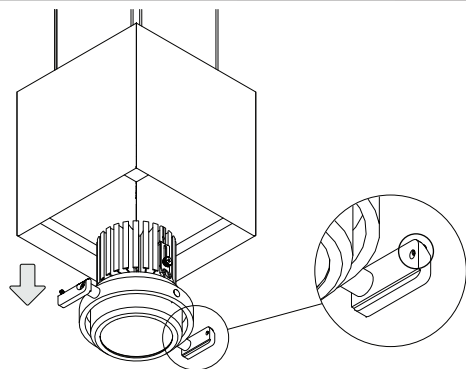


ⓘ LOOSEN SET SCREWS AND REMOVE GIMBAL ASSEMBLY

2

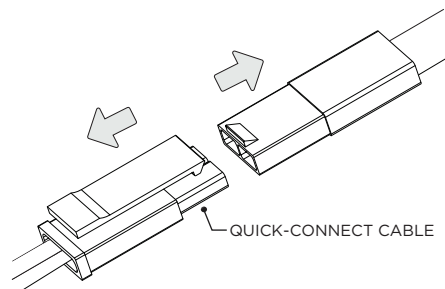


DISCONNECT QUICK-CONNECT CABLE FROM LED ASSEMBLY

3

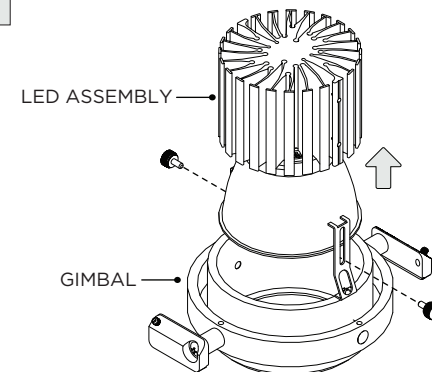

4

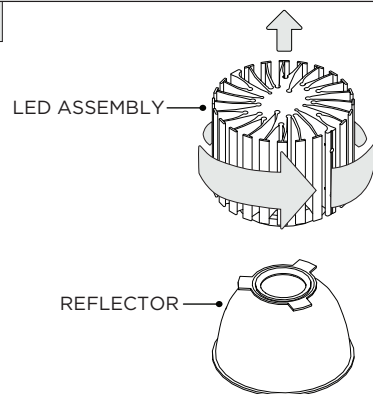


ⓘ THE IMAGES SHOWN ARE FOR ILLUSTRATION PURPOSES ONLY AND MAY NOT BE AN EXACT REPRESENTATION OF THE PRODUCT


OPTIONS



SOFTENING/LINEAR
SPREAD LENS




BLACK HEXCELL LOUVER

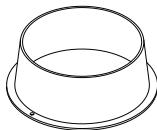

SNOOT


ⓘ INSTALLATION PROCESS IS IDENTICAL FOR M7, M5 & M3 GIMBALS

1

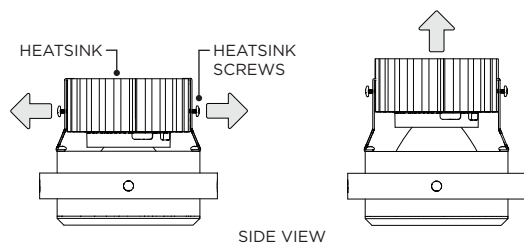


LOOSEN HEATSINK SCREWS AND RAISE HEATSINK TO ALLOW FOR
OPTICAL ACCESSORY CLEARANCE

2

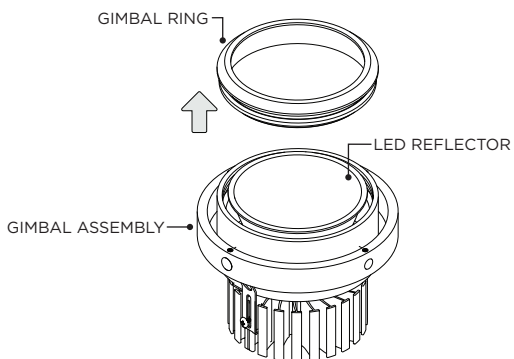


TWIST OFF GIMBAL RING FROM GIMBAL ASSEMBLY

3

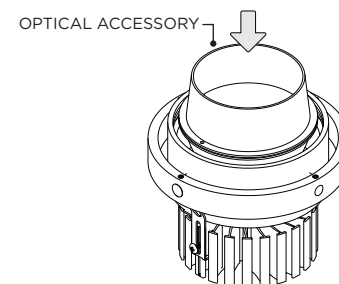


PLACE OPTICAL ACCESSORY ON TOP OF LED REFLECTOR

4

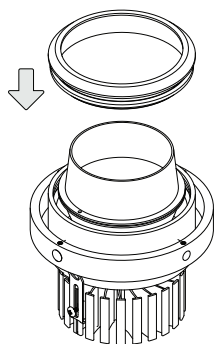

TWIST ON GIMBAL RING TO LOCK IN PLACE

5

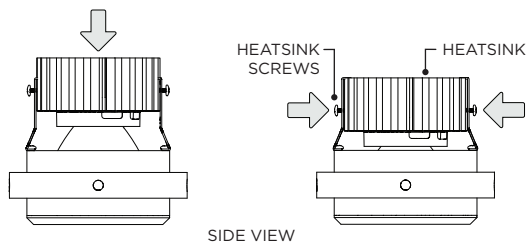

SIDE VIEW

LOWER HEATSINK AND TIGHTEN HEATSINK SCREWS