
3” SQUARE MICRO MADISON

TRIMLESS



INCLUDED COMPONENTS	
SH - SHALLOW HOUSING (FOR NEW CONSTRUCTION ONLY)	

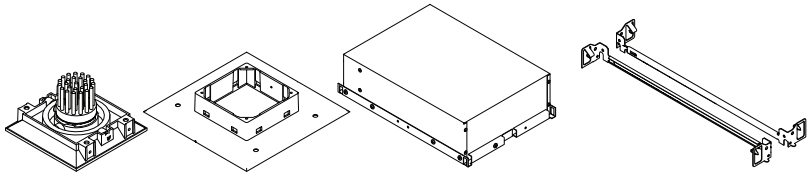

LED INSERT | MUDDING FLANGE | SHALLOW HOUSING | BAR HANGERS

INSTRUCTION KEY	INFORMATION
⚠ ADDITIONAL ⓘ ATTENTION ⚡ POWER ON ⚡ POWER OFF	INSTALLATION SHOULD ONLY BE PERFORMED BY A CERTIFIED ELECTRICIAN REFER TO LOCAL/NATIONAL CODES FOR PROPER INSTALLATION FAILURE TO FOLLOW INSTALLATION INSTRUCTION MAY VOID THE WARRANTY DO NOT TOUCH LEDS. LEDS MUST BE PROTECTED FROM MECHANICAL STRESS OR DEBRIS TURN OFF POWER DURING INSTALLATION OR SERVICING


3G LIGHTING

3" SQUARE MICRO MADISON
TRIMLESS


INSTALLATION INSTRUCTIONS

SH - SHALLOW HOUSING (FOR NEW CONSTRUCTION ONLY)

1

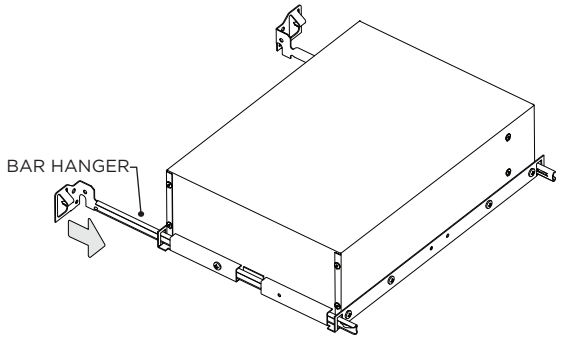


2

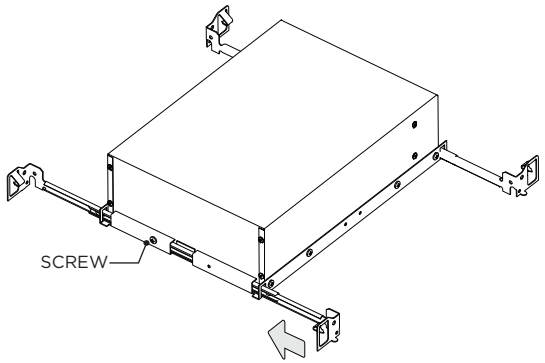


SECURE BAR HANGERS IN PLACE WITH SCREW

3

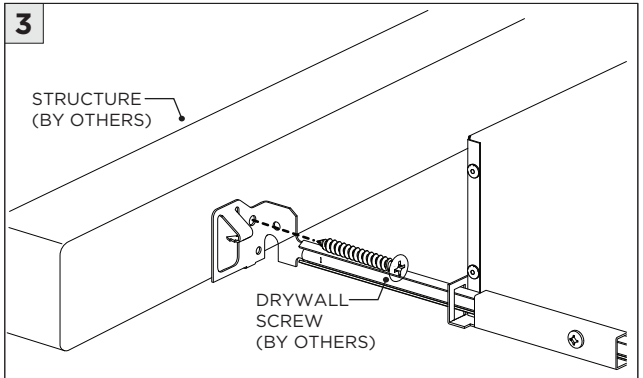


4

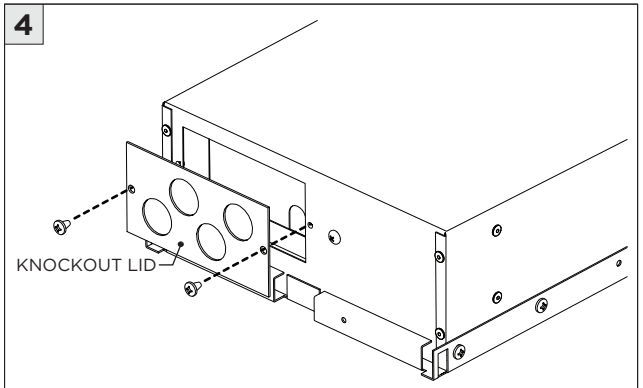

REMOVE ELECTRICAL BOX KNOCKOUT LID TO ACCESS WIRING

4A

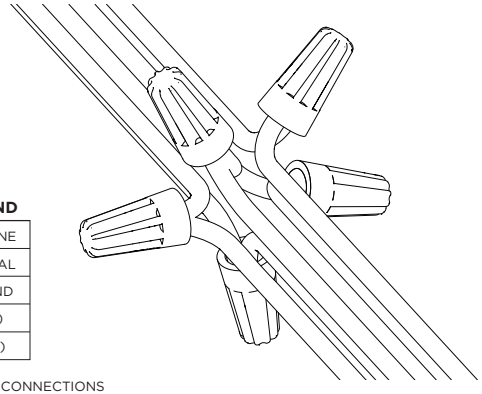


WIRING LEGEND

BLACK	HOT/LINE
WHITE	NEUTRAL
GREEN	GROUND
ORANGE	(DIM-)
PURPLE	(DIM+)

MAKE WIRING CONNECTIONS


5

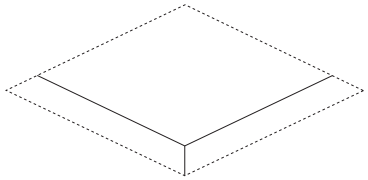


FIXTURE TYPE	CEILING HOLE SIZE
RC1M3	4.03" x 4.03"

INSTALL CEILING BELOW FIXTURE


6

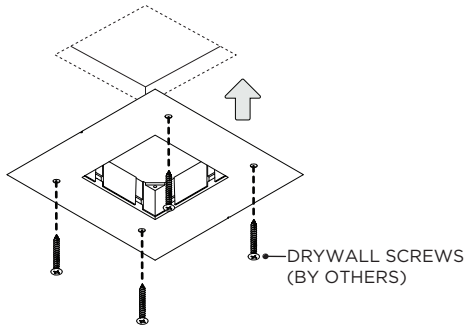

6A

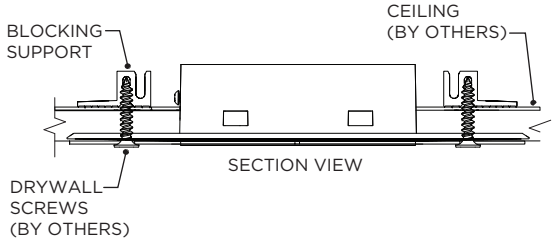


7

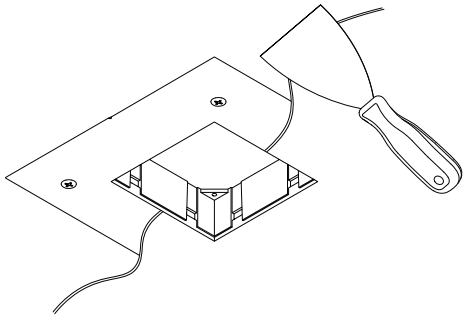


APPLY MUDDING COMPOUND (BY OTHERS) TO CEILING

8

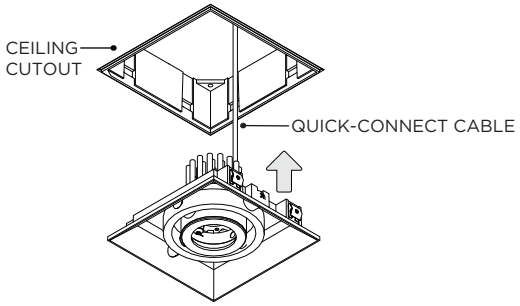

INSERT LED ASSEMBLY INTO CEILING


8A

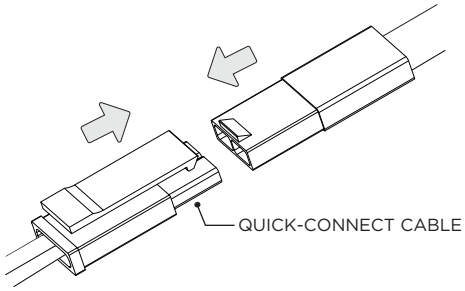

CONNECT QUICK-CONNECT CABLE TO LED ASSEMBLY


DRIVER SERVICING

1 **SH -** SHALLOW HOUSING

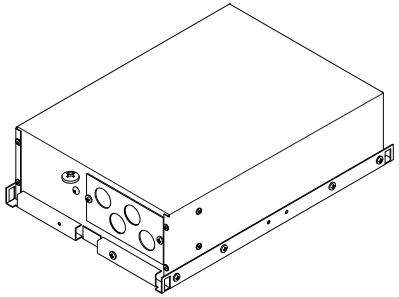


DISCONNECT POWER BEFORE SERVICING

2

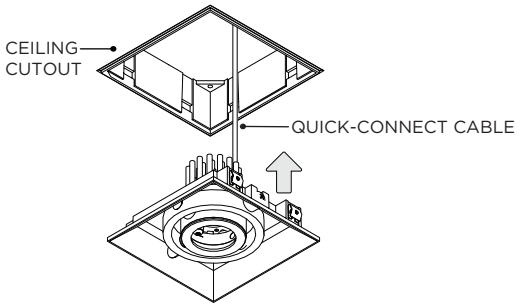


REMOVE LED ASSEMBLY FROM CEILING

2A

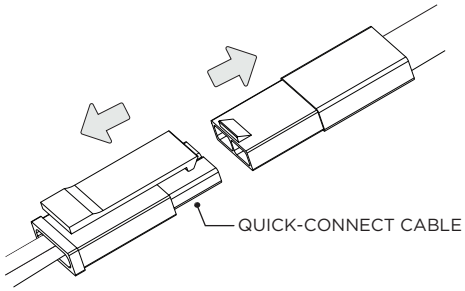


DISCONNECT QUICK-CONNECT CABLE FROM LED ASSEMBLY

3

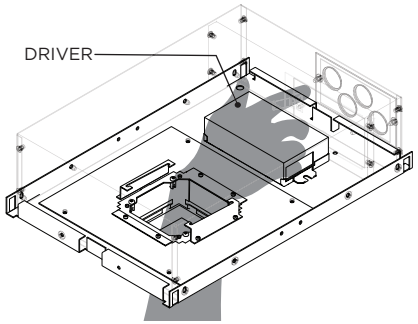


REMOVE DRIVER - SECURED WITH HOOK-AND-LOOP FASTENER

4

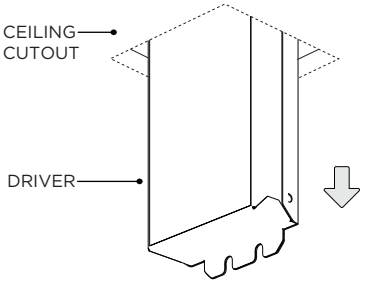


4A

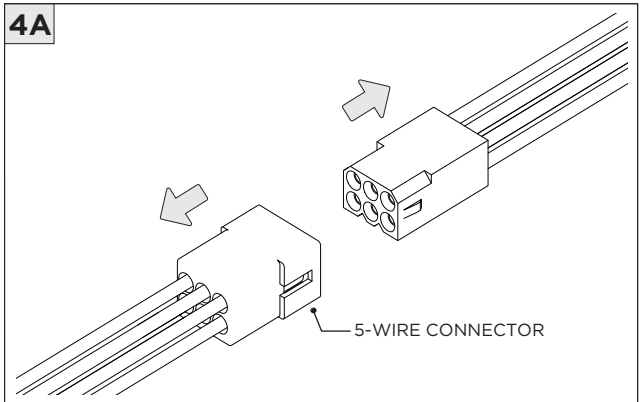

DISCONNECT 5-WIRE CONNECTOR


LED SERVICING

1

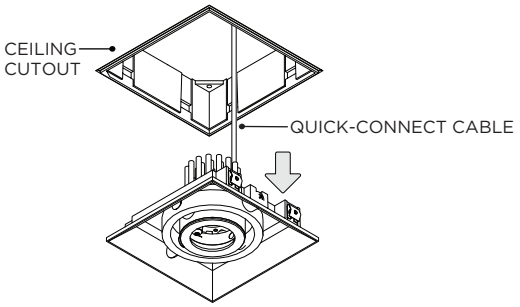


REMOVE LED ASSEMBLY FROM CEILING

2

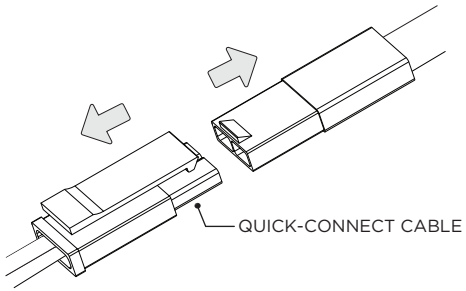


DISCONNECT QUICK-CONNECT CABLE FROM LED ASSEMBLY

3

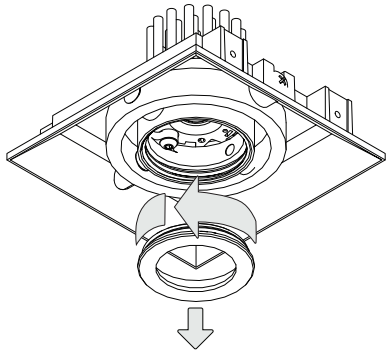

4

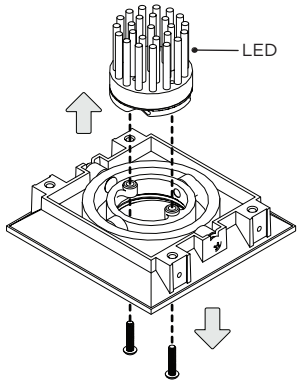


ⓘ THE IMAGES SHOWN ARE FOR ILLUSTRATION PURPOSES ONLY AND MAY NOT BE AN EXACT REPRESENTATION OF THE PRODUCT


OPTIONS



SOFTENING/LINEAR SPREAD LENS




BLACK HEXCELL LOUVER

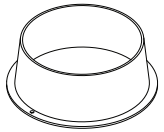

SNOOT


ⓘ INSTALLATION PROCESS IS IDENTICAL FOR M7, M5 & M3 GIMBALS

1

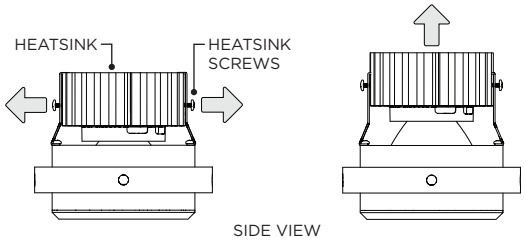


LOOSEN HEATSINK SCREWS AND RAISE HEATSINK TO ALLOW FOR OPTICAL ACCESSORY CLEARANCE

2

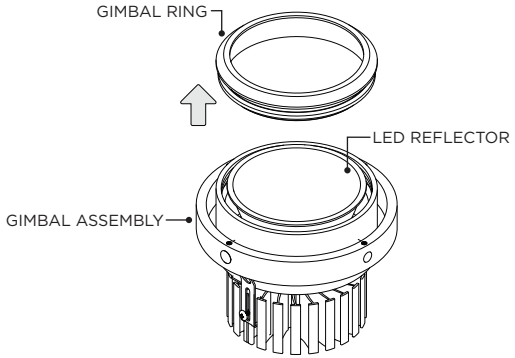


TWIST OFF GIMBAL RING FROM GIMBAL ASSEMBLY

3

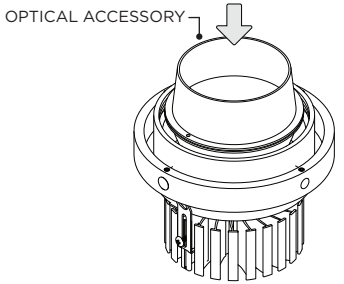


PLACE OPTICAL ACCESSORY ON TOP OF LED REFLECTOR

4

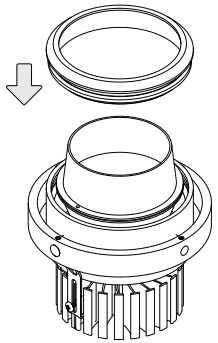

TWIST ON GIMBAL RING TO LOCK IN PLACE

5

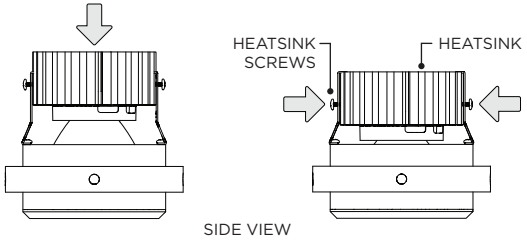

LOWER HEATSINK AND TIGHTEN HEATSINK SCREWS